



Outside
Install the portlight body from inside on the hull